# Radar cable into cable conduit

- General
- Location
- cut out

### General

This instruction describes how to fit a radar cable into the cable conduit on a complete and finished mast.

#### Location


- 1. Turn the mast into a side up position, starboard or portside.
- 2. Mark the height for the radarcable exit hole. **Not** closer than 150 mm from any other fitting.
- 2. Check type of section and B- dimension, see table 1. below. Measure out from B-line at the height position, aft for C-mast and fwd of B-line for F-mast, make a mark.

C-sections	B-	F-sections	B+
C156	25	F176	25
C175	35	F194	28
C193	35	F212	30
C211	45	F228	28
C227	50	F246	24
C245	55	F265	26
C264	55	F286	24
C285	55	F305	24
C304	55	F324	35
C321	55	F370	45
C365	55		


Table 1

## **Cut out**

1. Drill Ø 6,5 mm in the mark for radar cable hole through mast wall and cable conduit. Be sure to angle the drill in a correct angle to hit the conduit, see pic 1-2 and 5.

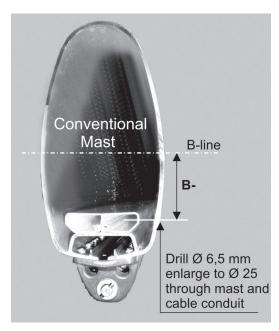

Pic 1.

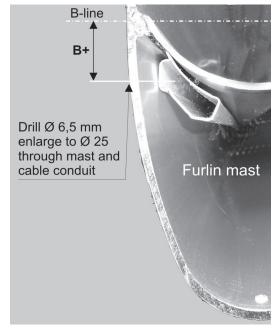



Pic 2.




- Enlarge to Ø 25 mm through mast and conduit. do not drill to deep, see pic 4-5.
- 3. Use a pointed pliers to remove the cable conduit remains by turning the pointed pliers until they come loose, see pic 3 and 6.
- 4. Grind the edges carefully on the in side of the conduit and in - outside of the mastwall.
- Blow clean from burrs and wipe off the mast with a mild detergent.
- Fit messinger line into the cable conduit and pull through the cable.

### For running cables see instruction 595-966-E

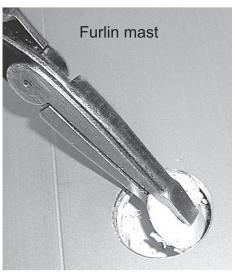

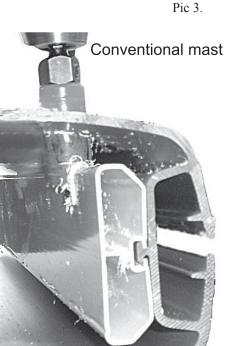

Pic 5.

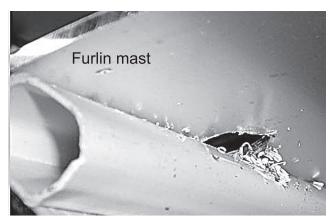

Pic 4.



Pic 6.

