

Forestay box type Triple Combi

505-018-01 (Ø7mm forestay)



505-018-03 (Ø6mm forestay)

Fitting Instruction

Tools needed:

- Pencil
- Ø 40 mm holesaw
- Ruler
- Jigsaw
- Drill
- Half round file
- Ø 5.0 mm drillbit
- Ø 9.0 mm drillbit
- Screwdriver (Torx head)

Measurement:

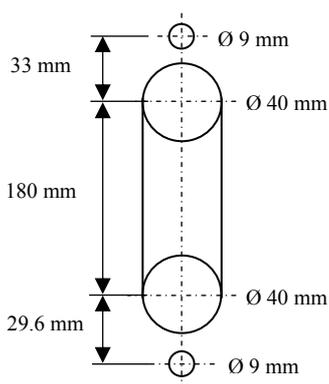

NB: Not to scale

Fasteners: 2 screws MRT 8 x 25 (round, Torx head) Included

Location on the mast:

The upper Ø 40 mm hole, according to sketch above, should be located 15 mm above the I-point (ISP)

Fitting procedure:

1. On the front line of the mast, mark and pre-drill with the Ø 5.0 mm drillbit for all 4 holes according to the sketch above.
2. Enlarge the top and the bottom holes to Ø 9.0 mm.
3. Enlarge the two intermediate holes to Ø 40 mm using the holesaw.
4. Draw straight lines between the Ø 40 mm holes, one on each side, touching the edges of the hole.
5. Check that the distance between the lines is equal to the width of the fitting.
6. Saw along the "inner edges" of the lines, so that the width of the slot will be the same as that of the fitting.
7. File the edges of the slot. They must be smooth without any notches.
8. Check that the box fits in the slot. The fitting is inserted into the slot and is then pulled against the front of the mast until it rests on the inner surface of the mast above and below the slot. Adjust, if necessary, the slot with the file so that the box fits. The fitting shall rest on the mast wall at its lower end.
9. Remove the box. Feed the genoa and spinnaker halyards (or messengers) and reinsert the fitting.
10. Lubricate the screws and tighten them carefully so that the mast wall is not deformed