
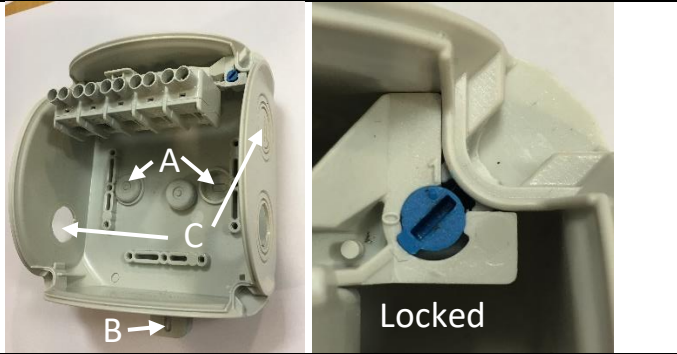


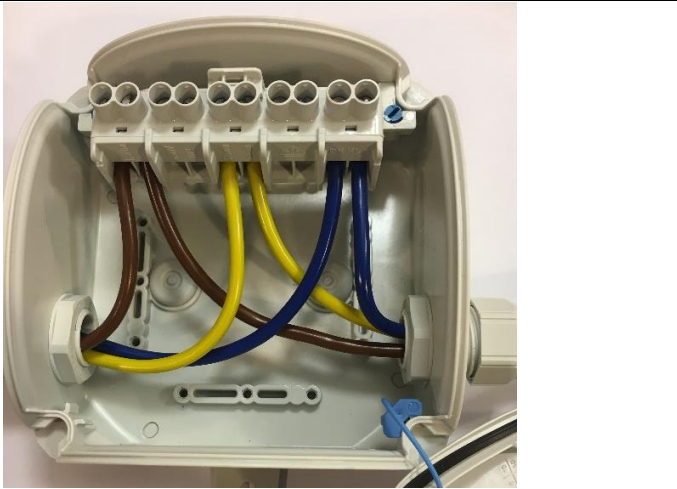


Assembly instructions Junction box 532-487-01.

Decide the position of the junction box before starting. Refer to Furlex Manual regarding positioning.

<p>1. Remove the lid by turning locks $\frac{1}{4}$ turn counter-clockwise.</p>	
<p>2. Remove the centre of two of the perforated areas with a flat screwdriver. Note that different options are possible (C). Attach the junction bridge along any of the sides of the junction box with the blue locking devices set to "0". Once in place, turn the locking devices to "1" to lock the bridge.</p>	
<p>3. Fit the junction box using holes A or brackets B. Cover screw heads with the grommets if holes A are used. Use stainless screws.</p>	
<p>4. Replace the rubber seals with the three hole grommets supplied.</p>	
<p>5. Route the cables through the fittings. Strip the cover from the cables and connect as shown. Applying petroleum jelly or similar on the cable ends will prevent corrosion.</p>	
<p>6. Fit the lid strap and attach the lid to the box. Lock the lid by turning locks $\frac{1}{4}$ turn clockwise.</p>	