



Assembly instructions

Spin block bracket 508-568-01

Head box 501-565

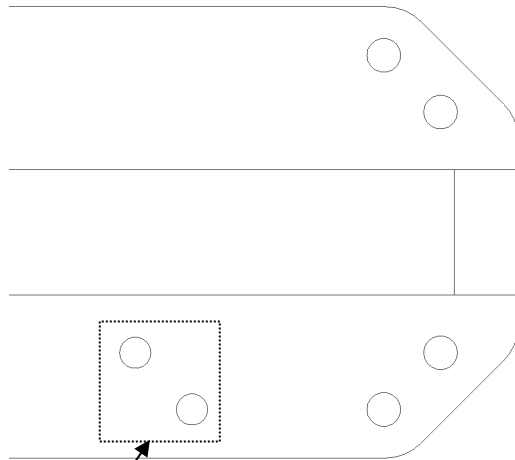

Drill two 13 mm holes
in head box. Use
bracket as template.

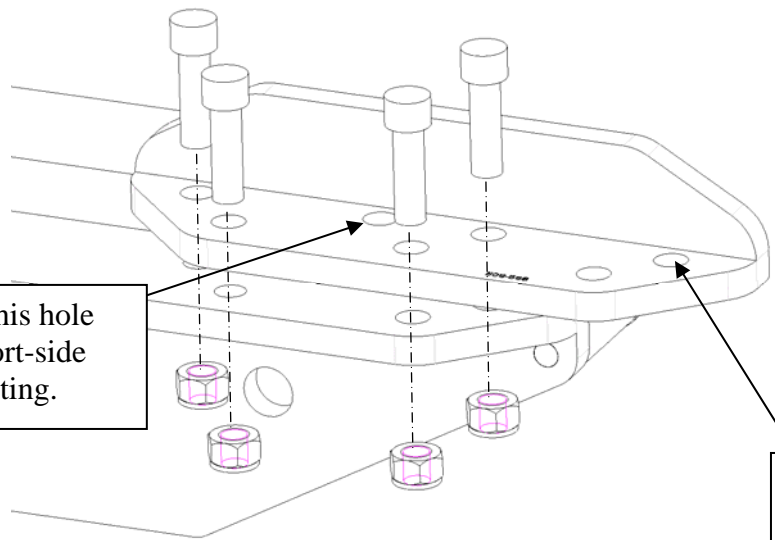

Use this hole
for port-side
mounting.

Assemble
U-bracket
508-092