




Standard Track Gate 505-533-01



To remove: Push in at the lower end, and use a narrow screwdriver to lift the locking sphere. Push the lower black plastic gate lower end into the sail track and slide it down.



When the upper fork ends are clear of the stainless steel feeder, lift the fork end clear and pull the gate out.

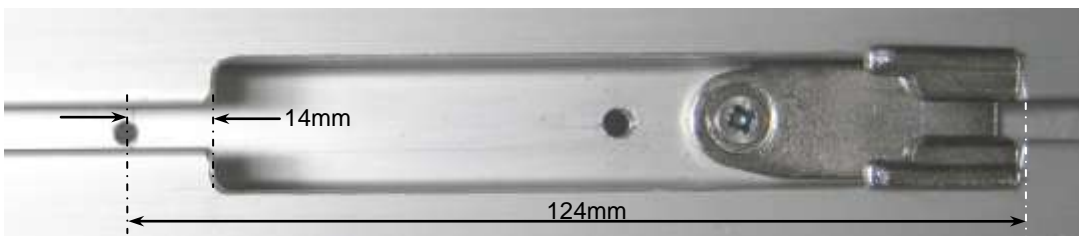

Drill a  $\varnothing 3.0\text{mm}$  hole on the centerline as shown, located 14mm below the base of the cutout, 124mm below the top of the cutout.

Feed a piece of spare cloth into the sail track below the new hole to prevent losing items down the track. Glue the self tapping screw to a screwdriver with grease. Apply grease to the screw thread and cut the thread. Remove the screw.



Insert the gate, and push it as far up as possible to make space for the screw head to pass. Use grease again to hold the screw onto the screwdriver.



Locate the screw in the new  $\varnothing 3\text{mm}$  hole and screw in place.  
Remove rag packing through the sail slot